


TT-PSA - Quick Guide

SETUP PROCEDURE

FIGURE 1

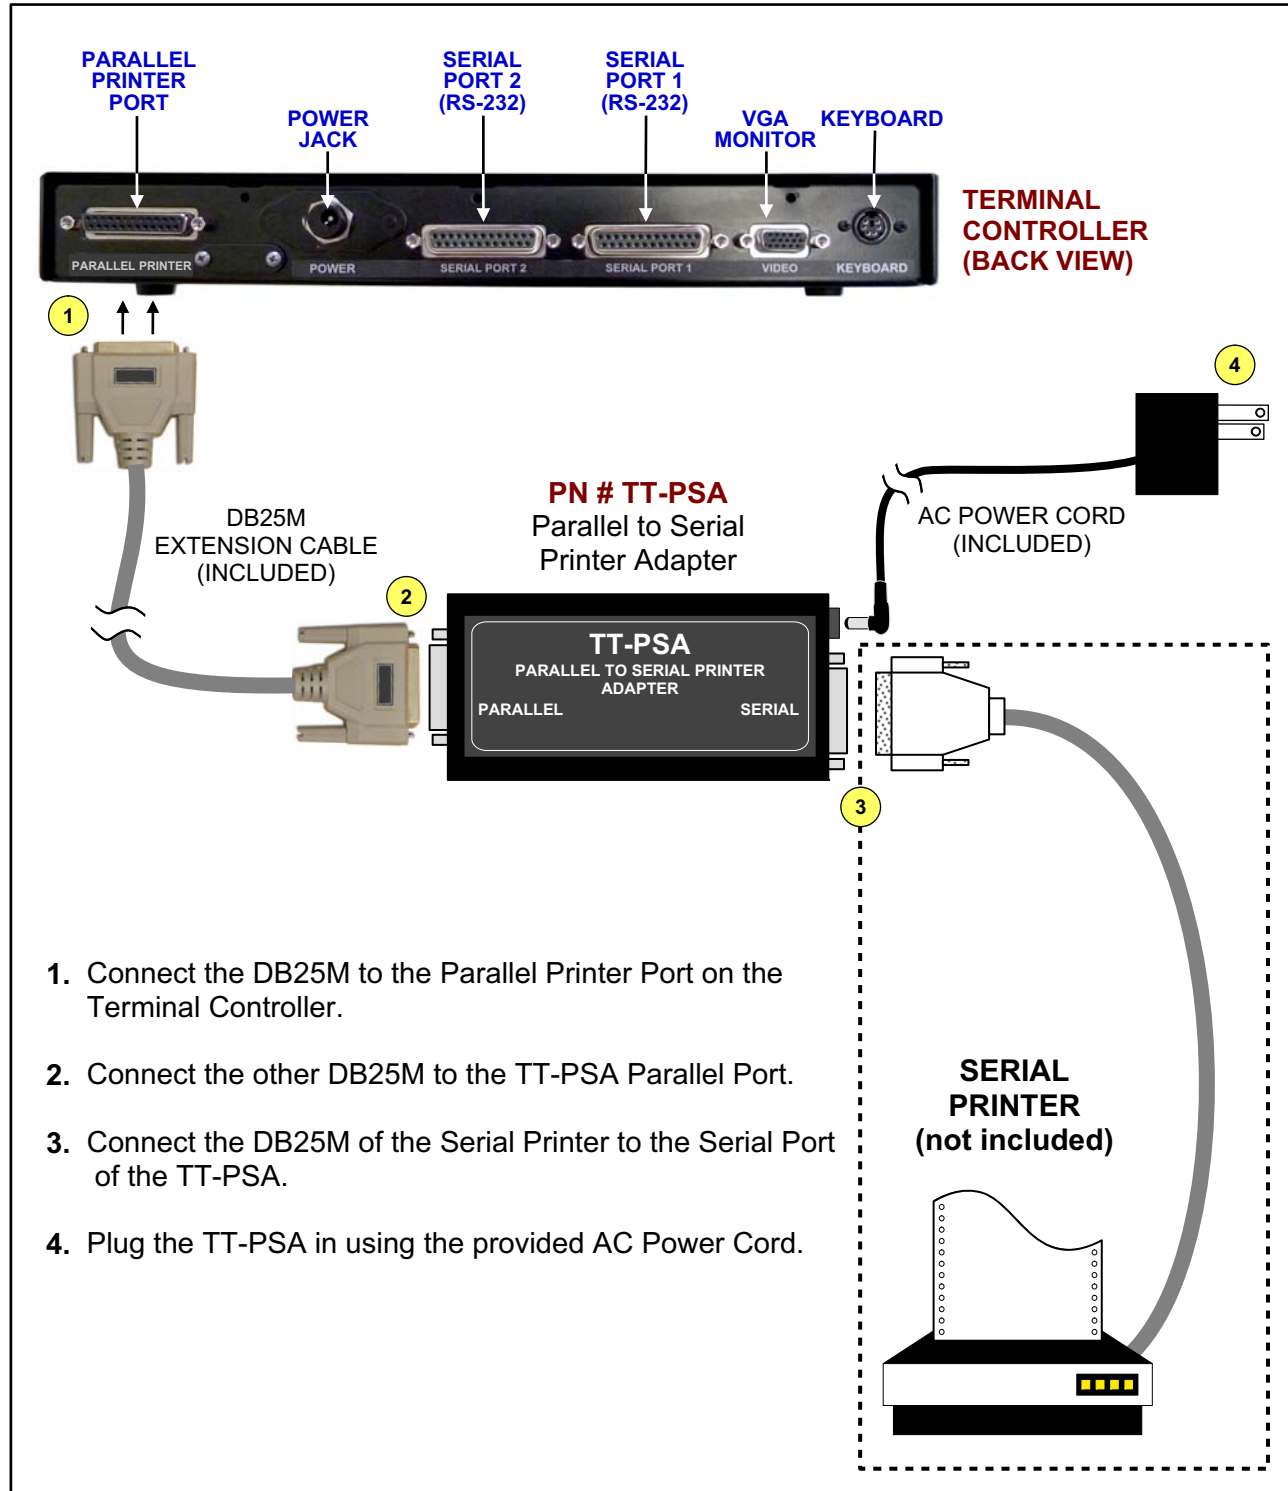

1. Connect the DB25M to the Parallel Printer Port on the Terminal Controller.
2. Connect the other DB25M to the TT-PSA Parallel Port.
3. Connect the DB25M of the Serial Printer to the Serial Port of the TT-PSA.
4. Plug the TT-PSA in using the provided AC Power Cord.

TT-PSA - Quick Guide

PRINTER OPTIONS

NOTE:

The TT-PSA printer port default setting is 9600 N81 with flow control off. If these settings need to change, please remove the printer setting switch plate located on the bottom of the unit (SEE FIGURE 2) and set switches (SEE FIGURE 3) according to label on terminal.

Reset power after changing switch settings.

FIGURE 2

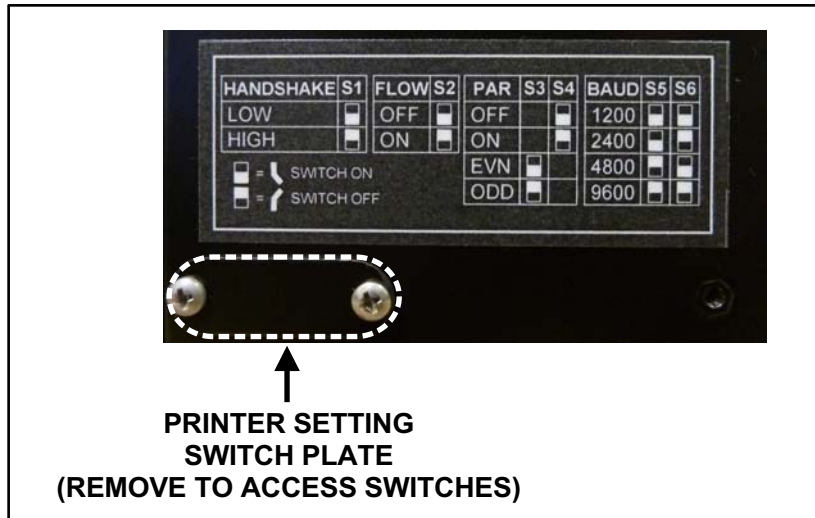


FIGURE 3

