


## 4 Port Environmental Control Unit (ECU) - User Guide


**TFC-MESA-04**

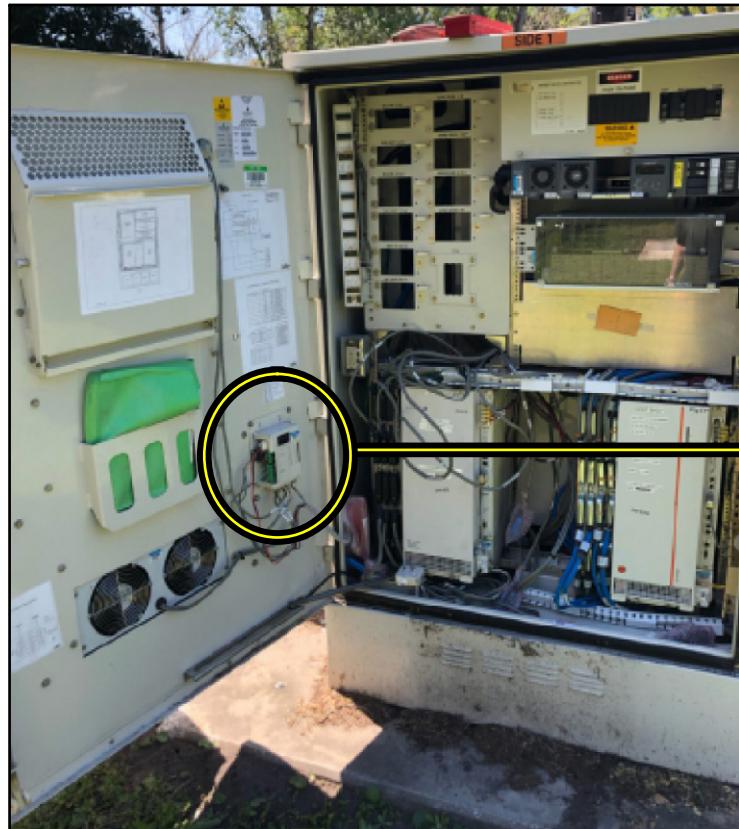

*used in Mesa 2  
DSLAM 192 & 384  
Type Cabinets*

### "4 Port Mesa ECU"

**PN # TFC-MESA-04**  
**4 Port Environmental Control Unit (ECU) Replacement**

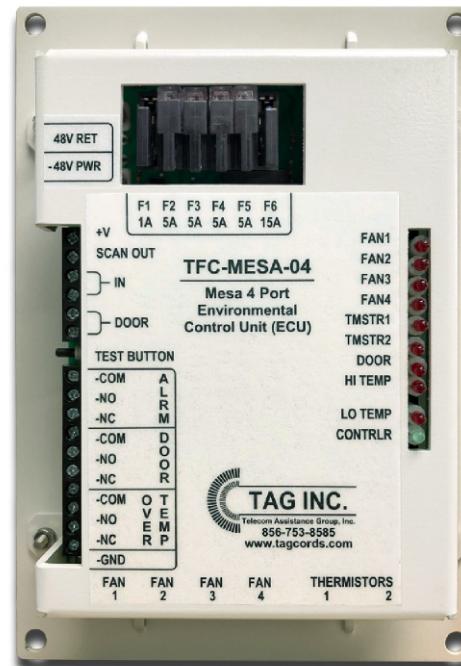

**INSIDE VIEW OF MESA 384 CABINET  
(EXISTING ECU IS MOUNTED ON THE CABINET DOOR)**

#### Ordering Information:

**TFC-MESA-04**

**4 Port Environmental Control Unit (ECU) Replacement**  
*(used in Mesa 2 - DSLAM 192 & DSLAM 384 Type Cabinets)*

**Call for Pricing**

150 Cooper Rd. (F-15)  
W. Berlin, NJ 08091

[www.tagcords.com](http://www.tagcords.com)  
**Telecom Assistance Group**

Telephone: (856) 753-8585  
Fax : (856) 768-7645

## 4 Port Environmental Control Unit (ECU) - User Guide

**TFC-MESA-04**

### **INPUT ALARMS AND SCAN POINT:**

#### **WARNING - SCAN OUT IS CONNECTED TO -48V**

##### **SCAN OUT (AUDIBLE BUZZER)**


NORMALLY OPEN  
CLOSES TO -48V IF DOOR OPEN  
(OPENS IF OVERRIDE ENGAGED)

##### **IN**

DOOR ALARM - NORMALLY CLOSED  
OPEN SWITCH = DOOR OPEN


##### **DOOR**

OVERRIDE SWITCH - NORMALLY CLOSED  
OPEN SWITCH = OVERRIDE

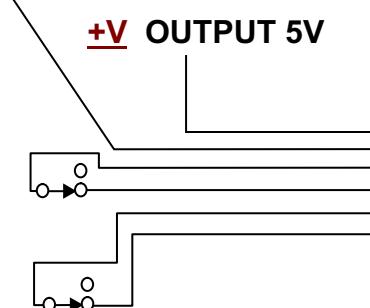

#### **NOTES:**

WHEN INSTALLING THE TFC-MESA-04; THE WIRING IS PIN FOR PIN.  
**\*\* DO NOT REUSE EXTERNAL PROTECTION BOARD \*\***  
THE TFC-MESA-04 HAS BUILT IN PROTECTION.

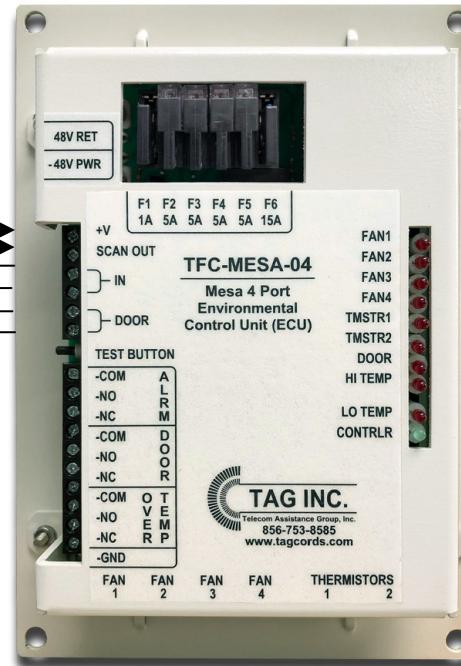

#### **NOTES:**

1. FANS RUN AT SLOW SPEED IF DOOR IS OPEN UNLESS OVERRIDE SWITCH IS ENGAGED.
2. SCAN OUT IS MEANT TO OPERATE THE BUZZER.
  - BUZZER WILL SOUND IF DOOR ALARM IS TRIGGERED.
  - OVERRIDE BUTTON WILL DISABLE AUDIBLE BUZZER FOR 20MIN.
3. BUZZER WILL SOUND INTERMITTENTLY FOR 30 SECONDS WHEN DOOR IS CLOSED.

150 Cooper Rd. (F-15)  
W. Berlin, NJ 08091

[www.tagcords.com](http://www.tagcords.com)  
**Telecom Assistance Group**

Telephone: (856) 753-8585  
Fax : (856) 768-7645

## 4 Port Environmental Control Unit (ECU) - User Guide

**TFC-MESA-04**

### **ALARM CONTACTS & OUTPUTS:**

#### **TEST BUTTON**

1ST PUSH - FANS SLOW SPEED  
2ND PUSH - FANS MEDIUM SPEED  
3RD PUSH - FANS HIGH SPEED  
4TH PUSH - BACK TO OPERATION

**(5 MINUTE TIMEOUT)**

#### **ALRM - ANY FAN OR THERMISTOR IN ALARM**


COM-NO = OPEN ON ALARM  
COM-NC = CLOSED ON ALARM

#### **DOOR - INTRUSION ALARM**

COM-NO = OPEN ON ALARM  
COM-NC = CLOSED ON ALARM

#### **OVER TEMP - ALARM**

COM-NO = OPEN ON ALARM  
COM-NC = CLOSED ON ALARM

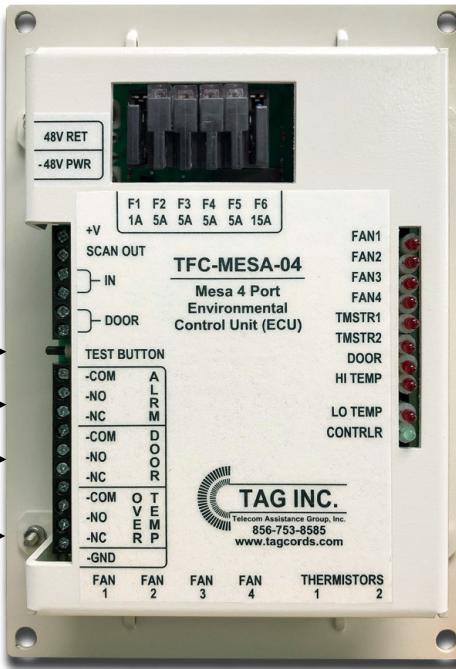

- FAN 1 - 4**  
LIGHT ON IF CORRESPONDING FAN IS IN ALARM
- TMSTR 1 - 2**  
LIGHT ON IF THERMISTOR IS DEFECTIVE
- DOOR**  
LIGHT ON IF DOOR IS OPEN
- HIGH TEMP**  
LIGHT ON IF TEMP OVER 60°C
- LO TEMP**  
LIGHT IS NOT USED ALWAYS OFF
- CONTRLR**  
LIGHT ON IF CONTROLLER IS FUNCTIONING PROPERLY

**ALRM, DOOR AND OVER TEMP CONTACT ARE ISOLATED RELAYS**

150 Cooper Rd. (F-15)  
W. Berlin, NJ 08091

[www.tagcords.com](http://www.tagcords.com)  
**Telecom Assistance Group**

Telephone: (856) 753-8585  
Fax : (856) 768-7645