 





Fujitsu FLASHWAVE® 4100 DS1 Streaker Card ST-FUJ4100DS1 Practice

► Physical Description and Wiring

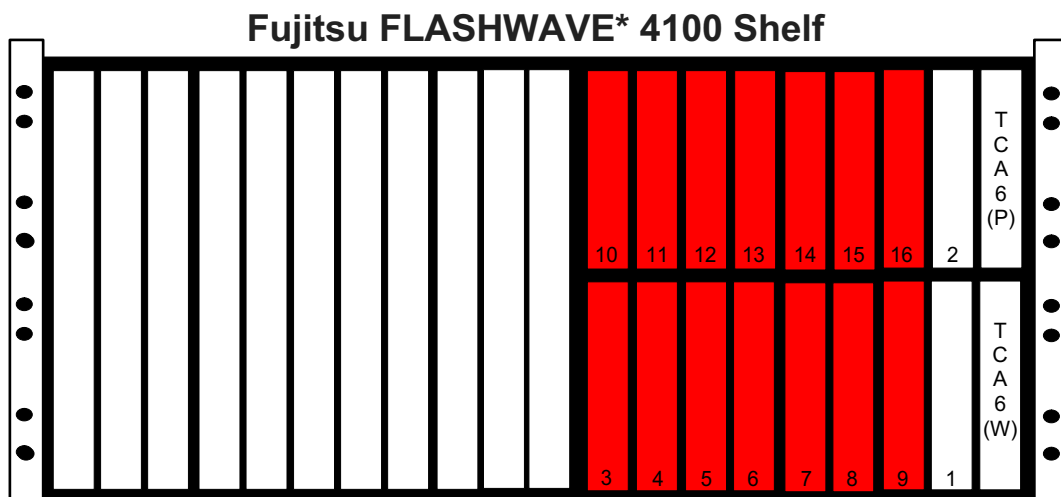

 
■ *The (ST-FUJ4100DS1) FLASHWAVE* 4100 DS1 streaker card will plug into slots 3-16 color coded red.

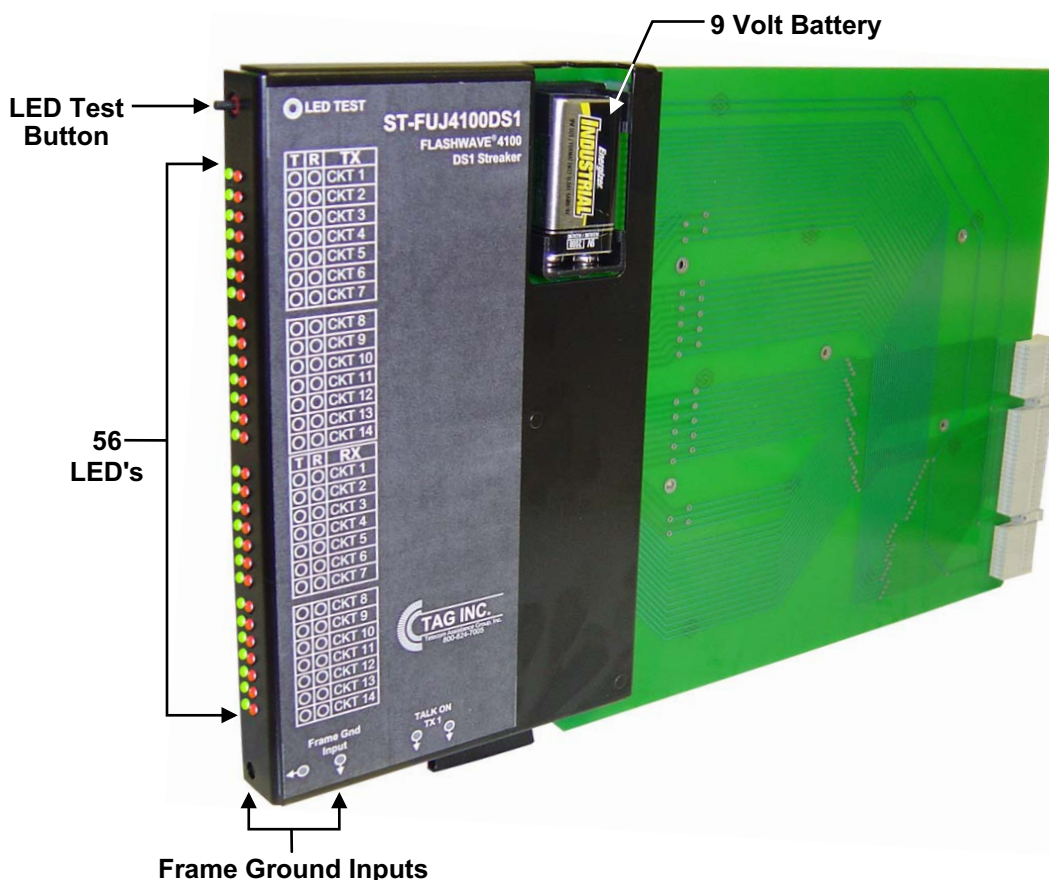



Fujitsu FLASHWAVE® 4100 DS1 Streaker Card ST-FUJ4100DS1 Practice

 ▶ Step by Step Procedure

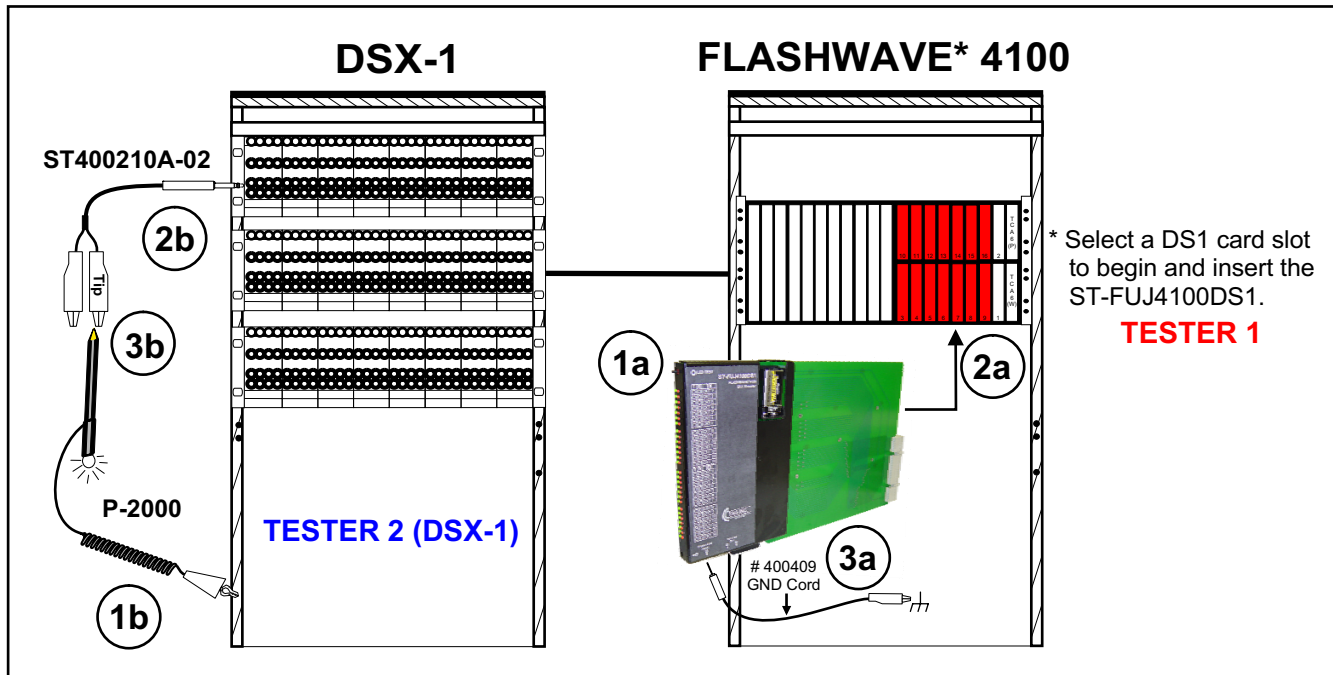

TESTER 1 (Fujitsu FLASHWAVE 4100 Equipment)

- 1a. Press LED test button. Verify that all LED's illuminate. If LED's do not illuminate, replace with a new battery.
- 2a. Select DS1 card slot (3-16) to begin testing.
(CAUTION: Do not force. Verify proper alignment before inserting.)
- 3a. If chassis ground is not already connected through the backplane, insert Pin plug test cord (# 400409) into the ST-FUJ4100DS1 Streaker Card and connect the Alligator Clip to Frame Ground.
- 4a. Establish communication with Tester 2 at the DSX-1. You are ready to begin testing at the Fujitsu FLASHWAVE 4100 (observe LED's illuminating).

TESTER 2 (DSX-1)

- 1b. Connect test probe (P-2000) Alligator Clip to Frame Ground.
- 2b. Plug Bantam to Alligator Clips cord in DSX-1 jack to begin testing
- 3b. Touch Probe end to "ground the corresponding wiring assignments." The LED on the probe will illuminate to indicate a connection to the ST-FUJ4100DS1 Streaker Card.

LED (DS1 TX Tip) = DSX-1 (DS1 TX Tip).