
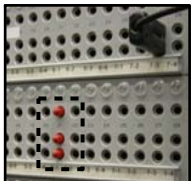

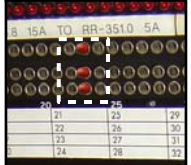

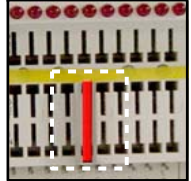

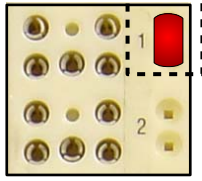


# SS7 Audit Kit

# SS7-KIT

**KIT VZ Material ID #**  
**1105 3270**




## Dummy Plugs

QTY / PN # / DESC.	(not to scale)	
(20) 310DP 310 Dummy Plug	 <b>VZ ID #</b> <b>700 262 684</b> (QTY of 1)	
(20) 210DP Bantam Dummy Plug	 <b>VZ ID #</b> <b>1105 5520</b> (QTY of 1)	
(8) 800DP 800 DSX Dummy Plug	 <b>VZ ID #</b> <b>700 264 167</b> (QTY of 1)	
(10) 453ADP 453A Dummy Plug		

- Plugs into vacant 310 (PN # 310DP), bantam (PN # 210DP), 800 DSX (PN # 800DP) or 453A (PN # 453ADP) jacks
- Used to prevent accidental insertion / disruption of the circuit
- Identifies special circuits (i.e. SS7 circuits)





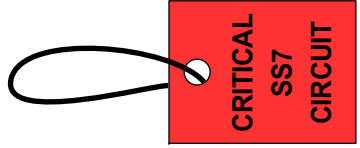
## Protective Caps

## Carrying Case Included

QTY / PN #	Description	(not to scale)
(50) SS7-2P	SS7 2 Pin Cap (1/2)	
(50) SS7-3P	SS7 3 Pin Cap (5/8)	
(24) SS7-6P	SS7 6 Pin Cap (1 3/8)	

- Placed over wire wrap terminals at MDF Frames
- Identifies special circuits (i.e. SS7 circuits)

## Labels & Tags

PN #	Description / QTY	(approx. size)
SS7-LB1	SS7 Labels, (SM) <b>VZ ID #:</b> 1105 6750 (QTY of 50)	
SS7-LB2	SS7 Labels, Rectangle (SM) <b>VZ ID #:</b> 1110 1991 (QTY of 50)	
SS7-LB3	SS7 Labels, Rectangle (LG) <b>VZ ID #:</b> 1110 1992 (QTY of 25)	
SS7-LBL3B	SS7 Labels, Rectangle (XLG) <b>VZ ID #:</b> 1126 2947 (QTY of 25)	
SS7-TAG	SS7 Threaded Tag <b>VZ ID #:</b> 1128 0030 (QTY of 50)	

150 Cooper Rd. (F-15)  
W. Berlin, NJ 08091

www.tagcords.com

**Telecom Assistance Group**

Telephone: (856) 753-8585

Fax: (856) 768-7645