


Business Class Test Kit

KIT-PRI

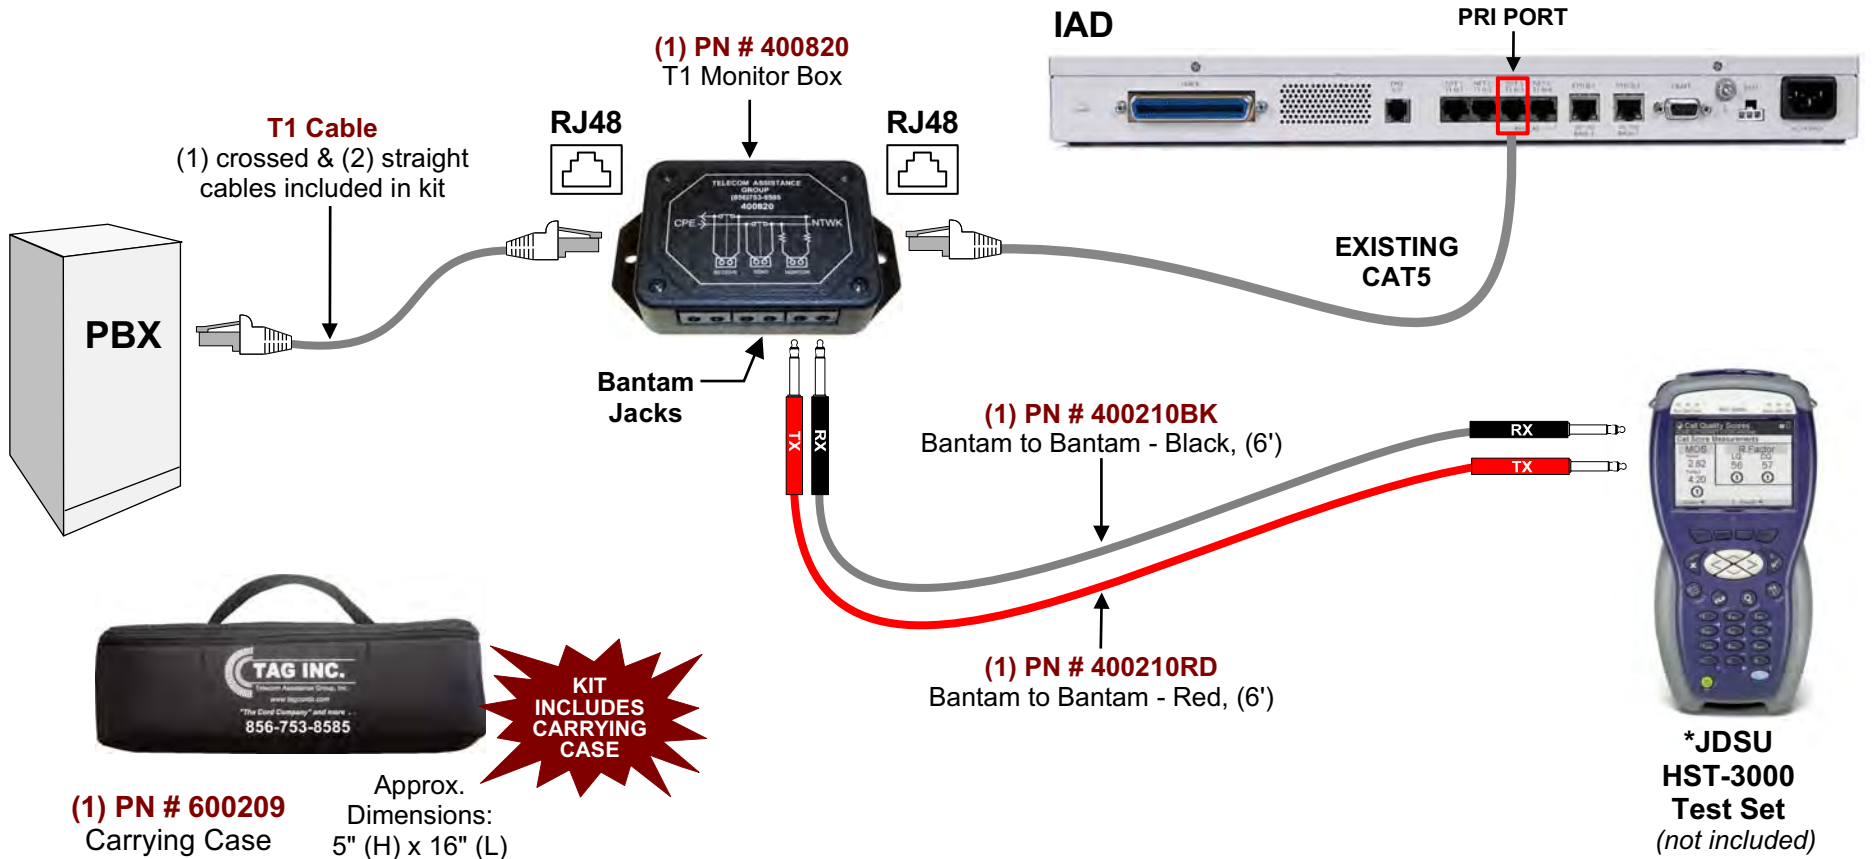

Ordering Information:

KIT-PRI

Business Class Test Kit

Call for Pricing

includes: (1) 400820, (1) 400248K, (2) 400448, (1) 400448TX, (1) 400210RD, (1) 400210BK & (1) 600209 - carrying case

400820

T1 Monitor Box

400248K

Bantam "Y" to "Snagless" RJ48 - T1, (8')

150 Cooper Rd. (F-15)
W. Berlin, NJ 08091

www.tagcords.com

Telecom Assistance Group

Telephone: (856) 753-8585

Fax: (856) 768-7645

Business Class Test Kit

KIT-PRI

Ordering Information:

KIT-PRI Business Class Test Kit

includes: (1) 400820, (1) 400248K, (2) 400448,
(1) 400448TX, (1) 400210RD,
(1) 400210BK & (1) 600209 - carrying case


(1) PN # 400248K

Bantam "Y" to "Snagless" RJ48 - T1, (8')



(2) PN # 400448

RJ48 to RJ48, (6')




(1) PN # 400448TX

RJ48 to RJ48 - T1 Crossover Cable, (6')




(1) PN # 400210BK

Bantam to Bantam - Black, (6')



(1) PN # 400210RD

Bantam to Bantam - Red, (6')



(1) PN # 600209

Carrying Case


Approx. Dimensions:
5" (H) x 16" (L)

Business Class Network Interface Device (NID)


(1) PN # 400820

T1 Monitor Box

RJ48



RJ48



Bantam Jacks

Application:

- ▶ One unit per T1 is required and is installed between the VGW and the customer PBX by the Business Class provider.
- ▶ The 400820 (NID) provides an input (Network) RJ48 port to connect the VGW to the NID. *The Business Class provider will be responsible for providing the connection from the VGW to the 400820 (NID).*
- ▶ An RJ48 port (CPE) provides Business Class customers a connection from PRI and the CPE PBX. *This connection is the customer's responsibility.*
- ▶ Bantam test ports are located on the bottom of the 400820 (NID) for future maintenance and performance testing connected to the preferred test set.

150 Cooper Rd. (F-15)
W. Berlin, NJ 08091

www.tagcords.com

Telecom Assistance Group

Telephone: (856) 753-8585

Fax: (856) 768-7645