


DS1/DS3 Cord Kit

DS1 (T1 Cords) Bantam Jack on Test Set


- (1) Bantam to Bantam, (8') - Red # 400210RD-08
- (1) Bantam to Bantam, (8') - Black # 400210BK-08




- (1) Bantam to Alligator Clips, (8') - Red # 400210ARD-08
- (1) Bantam to Alligator Clips, (8') - Black # 400210ABK-08

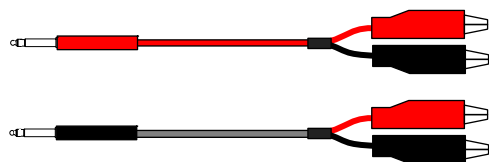


- (1) Bantam to Protector, (8') - Red # 400210SRD-08
- (1) Bantam to Protector, (8') - Black # 400210SBK-08

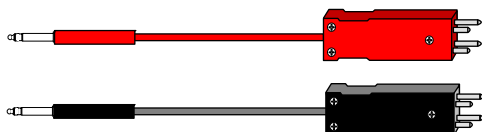

- (1) Bantam "Y" to RJ48 -T1, (8') # 400248



- (1) Bantam to 310 Adapter - Red # 400239RD
- (1) Bantam to 310 Adapter - Black # 400239BK

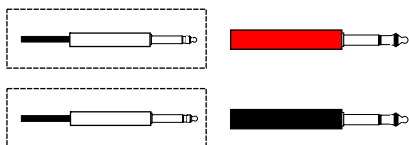

DS3 (T3 Cords) 440A Jack (Weco560A) on Test Set

- (1) 440A to 440A, (8') - Red # 400440ARD-08
- (1) 440A to 440A, (8') - Black # 400440ABK-08



- (1) 440A to 358A (8') - Red # 440358ARD-08
- (1) 440A to 358A (8') - Black # 440358ABK-08



- (1) 440A to BNC (8') - Red # 400440BRD-08
- (1) 440A to BNC (8') - Black # 400440BBK-08



- (1) 8 Pocket Carrying Case # TCC-001P

Ordering Information:

DS1/DS3 Cord Kit

KIT FTR UPN #
2209KIT

150 Cooper Rd. (F-15)
W. Berlin, NJ 08091

www.tagcords.com

Telephone: (856) 753-8585
Fax : (856) 768-7645

Telecom Assistance Group