

# DS1/DS3 Cord Kit


## DS1 (T1 Cords)

### Bantam Jack on Test Set


- (1) Bantam to Bantam, (8') - Red # **400210RD-08**
- (1) Bantam to Bantam, (8') - Black # **400210BK-08**




- (1) Bantam to Alligator Clips, (8') - Red # **400210ARD-08**
- (1) Bantam to Alligator Clips, (8') - Black # **400210ABK-08**

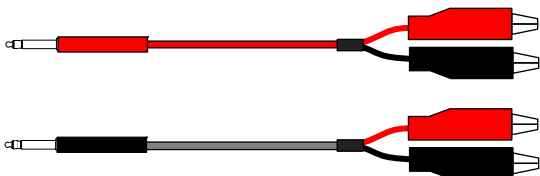


- (1) Bantam to Protector, (8') - Red # **400210SRD-08**
- (1) Bantam to Protector, (8') - Black # **400210SBK-08**

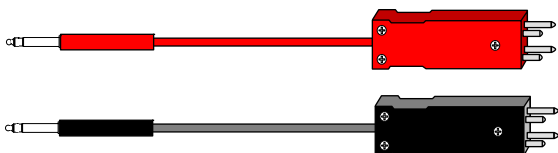

- (1) Bantam "Y" to RJ48 -T1, (8') # **400248**



- (1) Bantam to 310 Adapter - Red # **400239RD**
- (1) Bantam to 310 Adapter - Black # **400239BK**

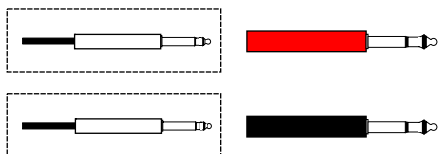

## DS3 (T3 Cords)

### 440A Jack (Weco560A) on Test Set

- (1) 440A to 440A, (8') - Red # **400440ARD-08**
- (1) 440A to 440A, (8') - Black # **400440ABK-08**



- (1) 440A to 358A (8') - Red # **440358ARD-08**
- (1) 440A to 358A (8') - Black # **440358ABK-08**



- (1) 440A to BNC (8') - Red # **400440BRD-08**
- (1) 440A to BNC (8') - Black # **400440BBK-08**



- (1) 8 Pocket Carrying Case # **TCC-001P**

### Ordering Information:

2209KIT DS1/DS3 KIT

**KIT VZ ID #**  
**1100 7868**

150 Cooper Rd. (F-15)  
W. Berlin, NJ 08091

[www.tagcords.com](http://www.tagcords.com)

Telephone: (856) 753-8585  
Fax : (856) 768-7645

**Telecom Assistance Group**