


Fan Installation Procedure


TF-DDM201

NOTE: BEFORE INSERTING THE FAN (PN #TF-DDM201) INTO THE DDM-2000* FAN TRAY, MAKE SURE THE CONNECTOR IS SEATED THROUGH THE HOLE ON THE MOUNTING PLATE.


1. SLIDE THE CONNECTOR THROUGH THE HOLE ON THE EXISTING MOUNTING PLATE (NOTE ORIENTATION OF CONNECTOR IN FIGURE A).
2. USE THE (4) SUPPLIED SCREWS TO ATTACH THE FAN TO THE MOUNTING PLATE.

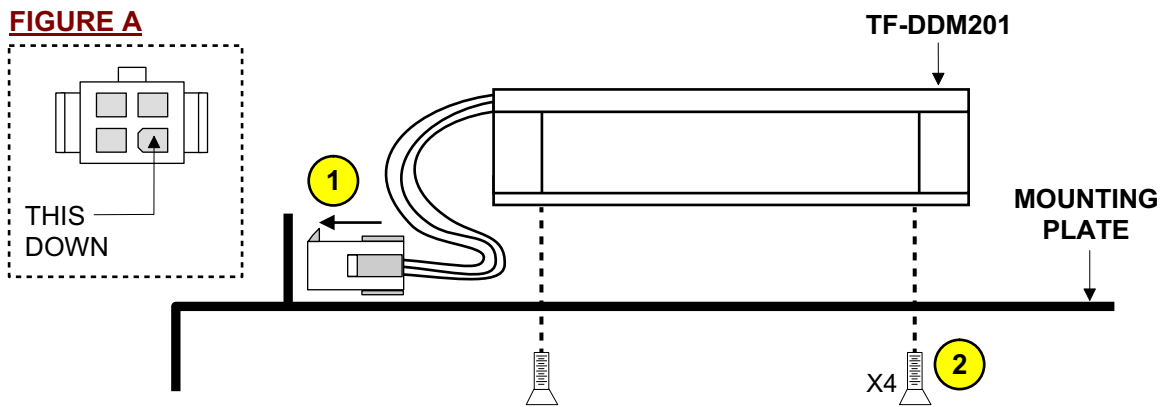

3. MAKE SURE THAT ALL WIRES ARE TUCKED BEHIND THE CONNECTOR MOUNTING FLANGE (SEE FIGURE B).

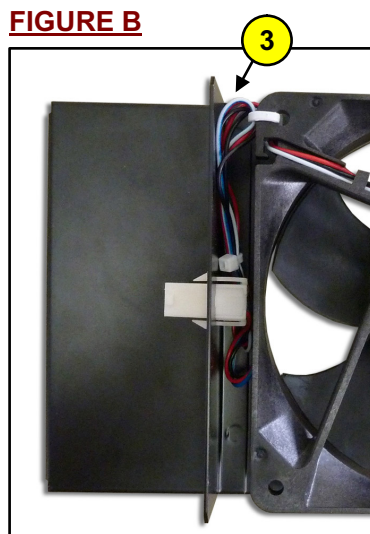

4. SLIDE THE MOUNTING PLATE INTO THE DDM-2000 FAN TRAY WITH THE CONNECTOR FACING OUT.

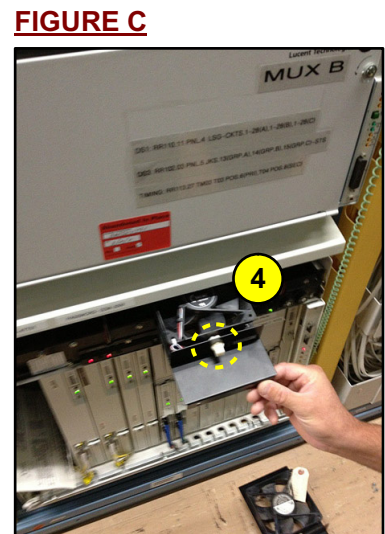

Ordering Information:

TF-DDM201	DDM-2000 24 Volt Replacement Fan (<i>fan only</i>)	Call for Pricing
TF-DDM201-KIT1	DDM-2000 24 Volt Replacement Fan Kit w/ Mounting Plate	

150 Cooper Rd. (F-15)
W. Berlin, NJ 08091

www.tagcords.com

Telephone: (856) 753-8585
Fax: (856) 768-7645

Telecom Assistance Group